




# Shrink Polymer Systems

Cable Installation Materials – 24 volts to 36 kV

## Things to do:

1. Check you have the right material and tools to complete the work.
2. Make sure you have enough time to complete the work.
3. **READ THE INSTRUCTIONS.**
4. If you need to cross cores, make sure it's in a screened area of the cable.
5. When working on Paper insulated cable, **DO NOT** leave the paper insulation exposed for longer than is necessary.
6. On XLPE cable, check which type of semi conductive screen is present.
7. If you have bonded screens, do you have a tool to remove it?
8. If you have “easy peel” screens, **TAKE YOUR TIME**, use a round file at the screen cut and **DO NOT** damage the XLPE insulation.
9. Keep your work area and hands clean.

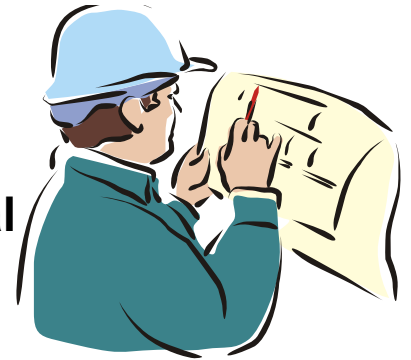

10. Remove all PVC phase marker tapes from MV terminations.

